Carrera Classic Corded Telephone

USER GUIDE

Unpacking your phone

In the box you will find:

- Base Unit
- Handset
- Coiled Handset cord
- Telephone line cord for Base unit
- User manual

Keep the packing materials in a safe place in case you later need to transport the unit

Keep your sales (till) receipt, which is your guarantee.

If you need help ...
The **Binatone Help Line** is available from 9.00 am to 5.00 pm, Monday to Friday, on

0845 345 9677

Calls are charged at local rate
Or visit our website:
www.binatonetelecom.com

iDECT

Important note---back up batteries

The Carrera Classic requires 3 x 1.5V AAA size Alkaline batteries installed into the battery compartment before use.
Warning:The caller display will not work and you will only be able to make and receive basic handset calls without batteries installed.

1. Where to find it

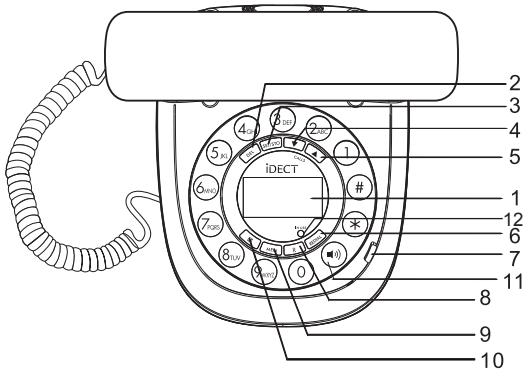

1. LCD Screen
2. DEL Delete button
3. SET/STO Set/Store button
4. ▼ Down/Caller Display List
5. ▲ Up/Caller Display List
6. REDIAL button
7. Ringer light indication
8. R(Recall) button
9. MEM Memory button
10. ⊠ Mute button
11. Speakerphone button
12. IN USE light indication

2. Installation

1. Locating the Base unit

The Base unit should be placed on a level surface, in a position where:

- the **telephone line cable** will reach your telephone line socket or extension socket.
- it is **not close to a sink, bath or shower**, or anywhere else where it might get wet.
- it is **not close to other electrical equipment** - fridges, washing machines, microwave ovens, TVs, fluorescent lights, etc.

2. Plug the coiled handset cord into the Handset.

Plug the other end into the socket in the underside of the base unit, and route the cable through the cable guide at the back or on the left side.

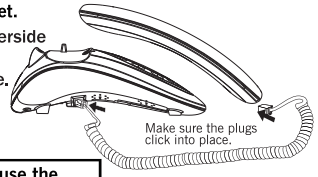

3. Place the Handset in the Base unit.

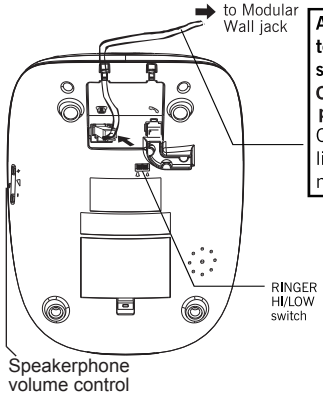

Always use the telephone line cord supplied with your Carrera Classic phone.
Other telephone line cords may not work.

4. Plug one end of the telephone line cord into the other socket in the underside of the base unit, and route the cable through the cable guide at the back, then plug the other end into your telephone wall socket.

5. Lift the Handset and check for Dial tone in the earpiece.

Warning: **If you connect the telephone to a line with a broadband (ADSL) connection, you must use a micro-filter between the telephone and telephone line, otherwise you may get interference between the telephone and the broadband, which could cause problems.**
If you need broadband micro-filters, contact your broadband supplier.

Installing (or Replacing) the Battery

IMPORTANT - Before removing the battery compartment cover,always make sure the base unit is disconnected from the telephone line.

- **Install 3 Alkaline AAA batteries into the battery compartment in the underside of the base, as shown below, and replace the cover before use.**

Note: 1) Please do NOT use Rechargeable batteries in this phone.
2) Batteries are not included with the unit.
3)The battery life is typically about 4 months, depending on usage.

When the batteries are low, will show on the right side of the display screen, If you do not replace the batteries, they will become totally discharged and your display screen will not work. and you may lose all the telephone memories and settings.

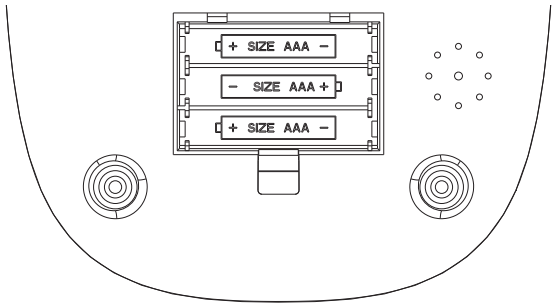

3. Setting up your phone

Press the **SET/STO** button to enter the menu and then use **UP** or **DOWN** buttons to cycle through the following options:

■ **SET 1 DATE** ■ **SET 2 LCD** ■ **SET 3 FLASH**

Note: *The system will time out if you leave more than 8 seconds between key presses.*

Set Time/Date

You will need to set the time and date so they can be shown correctly on the display.
If you subscribe to a Caller Display service, the time and date will be set automatically on receipt of your first incoming call, but you may still need to set the correct year.

1. **In standby mode, press the SET/STO button.**
   ⇨ The display shows ' **SET 1 DATE** '.
2. **Press the SET/STO button to confirm.**
   ⇨ The 'year' icon will be blinking.
3. **Press the UP or DOWN button to set the year.**
4. **Press the SET/STO button to confirm.**
   ⇨ The 'month' icon will be blinking.
5. **Press the UP or DOWN button to set the month.**
6. **Press the SET/STO button to confirm.**
   ⇨ The 'date' icon will be blinking.
7. **Press the UP or DOWN button to set the date.**
8. **Press the SET/STO button to confirm.**
   ⇨ The 'hour' icon will be blinking.
9. **Press the UP or DOWN button to set the hour.**
10. **Press the SET/STO button to confirm.**
    ⇨ The 'minute' icon will be blinking.
11. **Press the UP or DOWN button to set the minutes.**
12. **Press the SET/STO button to confirm the setting.**
    ⇨ The display shows ' **SET 2 LCD** ', you can continue with programming,or press the **DELETE** button to return to standby mode.

Set LCD Contrast

1. **In standby mode, press the SET/STO button.**
   ⇨ The display shows ' **SET 1 DATE** '.
2. **Press the UP or DOWN button until the display shows 'SET 2 LCD'.**
3. **Press SET/STO to confirm.**
4. **Press the UP or DOWN button to select your comfortable display viewing level (1~5).The default setting is 3.**
5. **Press the SET/STO button to confirm the setting.**
   ⇨ The display shows ' **SET 2 LCD** ' , you can continue with programming, or press the **DELETE** button to return to standby mode.

Set Flash Time

The Recall function may be required for some special services of your network provider. During a call, pressing the **R** button generates a line interruption and the length depends on your FLASH setting. The default value is 100ms,which is correct for most UK exchanges and should not need changing.

1. **In standby mode, press the SET/STO button.**
   ⇨ The display shows ' **SET 1 DATE** '.
2. **Press the UP or DOWN button until the display shows 'SET 3 FLASH'.**
3. **Press the SET/STO to confirm.**
4. **Press the UP or DOWN button to select 100 (default),300, 600, or 1000.**
5. **Press the SET/STO button to confirm the setting.**
   ⇨ The display shows ' **SET 1 DATE** ' , you can continue with programming, or press the **DELETE** button to return to standby mode.

4. Telephone Operations

Making a call

1 **Lift the Handset or press the SPEAKERPHONE button, and listen for a dial tone.**
⇨ The display shows ' **00-00** '.

2 **Dial the telephone number you wish to call.**
⇨ The display shows the number as you dial(maximum of 14 digits will be shown).

3 **To end the call, return the Handset to the Base unit, or press the SPEAKERPHONE button if speakerphone is selected.**

OR

You can pre-dial the number and check it on the display before dialling it.

1 Key in the telephone number you wish to call.

2 ⇨The display shows the number as you dial, and if you make a mistake you can press **DEL** to delete the last digit.

3 When you have entered the full number (maximum 32 digits), lift the Handset or press the **SPEAKERPHONE** or **DIAL** button on the base, and the number will dial out automatically.

To end the call, return the Handset to the Base unit, or press the **SPEAKERPHONE** button if speakerphone was selected.

To answer a call

When the phone rings;
Lift the handset or press the SPEAKERPHONE button on the Base unit.
⇨The Call timer starts after going on line, and the IN USE light will turn on.

To adjust the speakerphone volume

During a call;
Adjust the volume of the speakerphone to your comfortable volume level using the SPEAKERPHONE volume slide control located on the right side of the Base unit.

To end a call

Replace the Handset on the Base unit cradle or press the SPEAKERPHONE button on the Base unit.
⇨ The IN USE light indicator will turn OFF.

To switch between the Handset and the Speakerphone

During a phone conversation through the Handset, press the SPEAKERPHONE button to speak hands-free.
The IN USE light stays on, but conversation remains through the Handset until the Handset is replaced on the Base unit cradle.While in speakerphone mode, lift the Handset to switch off the Speakerphone and talk through the Handset.

Last Number Redial

1 2 **Lift the Handset or press the SPEAKERPHONE button on the Base unit.**
Press the REDIAL button.
⇨ The phone automatically dials the last number you called (maximum of 32 digits).

1 **Auto-redialling** - If you have dialled a number and the line is busy, while the telephone is still on-line, press the **REDIAL** button to automatically release the line, then return on-line and redial the number.

Mute Function

1 **During a call press the MUTE ⊠ button.**
⇨ When the mouthpiece is muted, the mute icon ⊠ will appear on the display and the person at the other end of the call cannot hear you but you can hear them.

2 **To get back to the call, press the MUTE ⊠ button again.**

Recall (Flash)

The Recall function may be required for some network features, such as Call Waiting, or if you are using your phone on a PBX (Private Exchange) line, and the PBX user guide tells you to press **RECALL** or **FLASH**: Press the **R (RECALL)** button on your phone.

Storing a Number in (0-9) two-touch memories

1 **In standby mode, Key in the telephone number you wish to stored.**
⇨ Up to a maximum 16 digits. If you try to store more than 16 digits, only the first 16 will be saved.

2 **Press the SET/STO button.**
⇨ The display shows "STorE IN"

3 **Press a (0-9) button to store the number in the selected memory.**

Dial out a (0-9) two-touch memory number

To dial a number stored in a Two-touch memory (0-9)

1 • Lift up the handset or press the **SPEAKERPHONE** button

2 • Press the **MEMORY** button (MEM)

3 • Key in the memory location number (0-9)

⇨ The number dials automatically.

Or: Preview then dial
Before lifting the handset, you can press the memory button (MEM) and the location (0-9) digit to see the number on the display, then lift the handset or press the speakerphone button to automatically dial the number.

Ringer volume

The **Ringer High-Low switch** located on the underside of the Base unit allows you to adjust the volume of the ringer.
- **High volume**
- **Low volume**

5. Caller Display Operation

VERY IMPORTANT:
To use Caller Display you must first subscribe to your network provider's Caller Display service. If you subscribe to a Caller Display service, you can see the phone number of the person calling you before you answer, and in the Calls List afterwards.The caller display information includes:

■ The caller's number (up to 14 digits) ■ The date and time of the call

Condition of Incoming Caller Information	LCD Screen will display
It is a repeated call	REP
It is a new call	NEW
A call from someone whose number is unavailable (for example an international call)	UNAVAILABLE
A call from someone whose number is withheld (for example by dialling 141)	WITHHELD
The caller display is incomplete or corrupted.	__ E __ ERROR
You have a new Voice Mail message (This is a caller display service, but is not usually available from UK network providers.)	✉

Caller Display list
This phone automatically stores the caller display information from the last 30 incoming calls.
If new calls are stored, they are indicated by a number from 1 to 30 next to the "NEW" icon at the top right of the display.
The total number of calls in the list is indicated by "00 CALL", "01 CALL" or "XX CALLS" on the display in standby, where XX is a number from 2 to 30.
When viewing the calls list, the "IN" icon appears at the top right with a number to indicate the position of the displayed call in the calls list.
If a call is received when the Call list is full, then the new entry will replace the oldest one.

Viewing the Caller Display list

1 **In standby mode, press the UP or DOWN button.**
⇨The display shows the most recent record if DOWN is pressed or the oldest record if UP is pressed.
If there are no Caller Display records, the display will show ' **00 CALL**'

2 **Press UP or DOWN again to scroll to the next Caller Display record.**

To return a call

1 **When a Caller Display record is displayed.**

2 **Press the REDIAL button, or lift the Handset, or press the SPEAKERPHONE button on the Base unit.**
⇨ The phone automatically dials out the displayed record.

To delete Caller Display records

When the Caller Display record is displayed.
Press the delete(DEL)button to delete the Caller Display record.
⇨ The display shows the next Caller Display record.
Press and hold the delete(DEL) button for 3 seconds and all the Caller Display records will be deleted.
⇨ The display automatically returns to standby mode and will show "00 CALL".

6. Product Guarantee

This product is guaranteed against manufacturing defects for a period of 1 Year.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please return it to your nearest Argos store.

If the item is shown to have had an inherent defect present at the time of sale, the store will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd

489 - 499 Avebury Boulevard

Central Milton Keynes

MK9 2NW

7. Technical details

Standard

Temperature range Operating 0 ºC to 40 ºC
Storage -20 ºC to 60 ºC

PBX compatibility Timed break recall:100ms (default), 300ms, 600ms, 1000ms.
Signalling type: DTMF (dual-tone multifrequency) also called tone dialling.

Network connection This equipment is intended to be used in the UK only.
Operation on other countries' PSTN termination points cannot be guaranteed.

EC Declaration of Conformity

We the manufacturer / Importer : Binatone Telecom Plc
1 Apsley Way London
NW2 7HF, United Kingdom.

Declare under our sole responsibility that the following product

Type of equipment: Corded phone
Model Name: Carrera Classic
Country of Origin: China
Brand: iDECT

complies with the essential protection requirements of R&TTE Directive 1999/5/EC on the approximation of the laws of the Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to ***electromagnetic compatibility (EMC)*** and the European Community Directive 2006/95/EC relating to ***Electrical Safety.***
Assessment of compliance of the product with the requirements relating to the essential requirements according to Article 3 R&TTE was based on Annex III of the Directive 1999/5/EC and the following standard:

EMC: **EN 55022:2010**
EN 55024:1998+A1+A2

Waste electrical products must not be disposed of with household waste. This equipment should be taken to your local recycling centre for safe treatment.

Electrical Safety: **EN 60950-1:2006+A11:2009+A1:2010+A12:2011**

The product is labelled with the European Approval Marking CE as show. Any Unauthorized modification of the product voids this Declaration.

Signature: (K.H.Mueller, CT0)

London,

Signature:Place & Date: Sep-12

Connection and conditions for use

You can connect your Carrera Classic to a direct exchange line (DEL) - a line connected to a local exchange, with its own phone number; to an extension socket connected to a DEL; or to an extension on an approved compatible PBX.

Do not connect the Carrera Classic as an extension to a pay phone.

The **ringer equivalence numbers (RENs)** of all instruments (phones, fax machines, etc.) connected to an exchange line **must not add up to more than 4** - otherwise, one or more of them may not ring and/or answer calls correctly.

The Carrera Classic phone has a REN of 1, and most other telephones have a REN of 1 unless marked otherwise.

Contents of this User Guide

1. Where to find it
2. Installation
3. Setting up your phone
4. Telephone operation
5. Caller display operation
6. Guarantee and service
7. Technical details

If you need help ...
The **Binatone Help Line** is available from 9.00 am to 5.00 pm, Monday to Friday, on
0845 345 9677
Calls are charged at local rate
Or visit our website:
www.binatonetelecom.com

Pressing buttons on your phone

■ When the instructions in this user guide tell you simply to '**press**' a button, this means that you should **press the button briefly, then release it.**

■ When the instructions tell you to '**press and hold**' a button, this means you should **keep the button pressed** until the display changes and/or you hear a tone.